



e-Link32/e-Link32 Pro User's Guide

Revision: V1.00 Date: July 17, 2017

[**www.holtek.com**](http://www.holtek.com)

Table of Contents

1 Overview.....	5
Introduction	5
Hardware Description	6
2 MDK_ARM (KEIL) Setup and Use.....	7
e-Link32/e-Link32 Pro for Keil Installation	7
e-Link32/e-Link32 Pro with Keil4 Setup and Use	14
e-Link32 Pro with Keil5 Setup and Use (No Support e-Link32).....	16
3 IAR Setup and Use.....	18
e-Link32/e-Link32 Pro for IAR Installation	18
e-Link32/e-Link32 Pro with IAR EWARM Setup and Use.....	24

List of Figures

Figure 1. e-Link32/e-Link32 Pro Debug Adapter Appearance	5
Figure 2. SWD 10-Pin Connector	6
Figure 3. HT32_Setup_Keil_vxx.exe Installation Introduction	7
Figure 4. HT32_Setup_Keil_vxx.exe Installation Path	8
Figure 5. HT32_Setup_Keil_vxx.exe Installation Process	8
Figure 6. Holtek e-Link32 USB Driver Installation Introduction	9
Figure 7. Holtek e-Link32 USB Driver Installation Path	9
Figure 8. Holtek e-Link32 USB Driver Installation Completion	10
Figure 9. Holtek e-Link32 Keil Plugin Old Version Uninstallation	10
Figure 10. Holtek e-Link32 Keil Plugin Installation Introduction	11
Figure 11. Holtek e-Link32 Keil Plugin Installation Path	11
Figure 12. Holtek HT32 Keil Support Package Installation Introduction	12
Figure 13. Holtek HT32 Keil Support Package Installation Path	12
Figure 14. Keil Installation Completion	13
Figure 15. e-Link32 Device Name	13
Figure 16. e-Link32 Pro Device Name	14
Figure 17. Keil4 Debugger Selection	14
Figure 18. Keil4 e-Link32 Setting Window	15
Figure 19. Keil4 e-Link32 Pro Setting Window	15
Figure 20. Keil4 - Flash Download Setup	16
Figure 21. Keil5 Debugger Selection	16
Figure 22. Keil5 Debugger Setup	17
Figure 23. Keil5 – Flash Download Setup	17
Figure 24. HT32_Setup_IAR_vxx.exe Installation Introduction	18
Figure 25. HT32_Setup_IAR_vxx.exe Installation Path	19
Figure 26. HT32_Setup_IAR_vxx.exe Installation Process	19
Figure 27. Holtek e-Link32 USB Driver Installation Introduction	20
Figure 28. Holtek e-Link32 USB Drive Installation Path	20
Figure 29. Holtek e-Link32 USB Driver Installation Completion	21
Figure 30. Holtek e-Link32 IAR Plugin Old Version Uninstallation	21
Figure 31. Holtek e-Link32 IAR Plugin Installation Introduction	22
Figure 32. Holtek e-Link32 IAR Plugin Installation Path	22
Figure 33. Holtek HT32 IAR Support Package Installation Introduction	23
Figure 34. e-Link32 Device Name	23
Figure 35. e-Link32 Pro Device Name	24
Figure 36. IAR Options	24
Figure 37. IAR Debugger Selection	25
Figure 38. IAR e-Link32 Debugger Setup	26
Figure 39. IAR e-Link32 Pro Debugger Setup	27
Figure 40. IAR e-Link32 Debugger Function Table	27
Figure 41. IAR e-Link32 Pro Debugger Function Table	27

List of Tables

Table 1. SWD 10-Pin Connector Pins 6

1 Overview

The purpose of this user's guide is to familiarise users with the Holtek e-Link32/e-Link32 Pro Debug Adapter. The guide includes information on how to setup and use the e-Link32/e-Link32 Pro with the Keil MDK-ARM and IAR EWARM.

Introduction

The Holtek e-Link32/e-Link32 Pro connects the target board (via Serial Wire) to the PC's USB port. Users can then program and debug their embedded programs on the target board.

The e-Link32/e-Link32 Pro provides the following key features.

- Supports HT32 Series MCUs
- Serial Wire Debug interface
- Integrates with Keil & IAR IDE
- USB powered
- 10-pin Cortex Debug Connector
- Three LEDs used to display the USB, ERROR and RUN status
- Single RESET button
- Serial communication with the target MCU (for e-link32 Pro only)



Figure 1. e-Link32/e-Link32 Pro Debug Adapter Appearance

Hardware Description

The e-Link32/e-Link32 Pro supports a Serial Wire Mode interface. There are only two pins, SWCLK (Serial Wire Clock) and SWDIO (Serial Wire Debug Data Input/Output), which are used for programming and debugging. However there are another two USB Virtual COM Ports for the e-Link32 Pro Serial Communication ^(Note). The following illustration shows the debug connector.

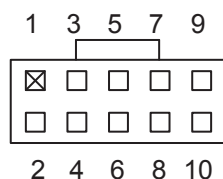


Figure 2. SWD 10-Pin Connector

Pin#	Description	Pin#	Description
1	3.3V	2	SWDIO
3	GND	4	SWCLK
5	GND	6	Reserved
7	NC (VCOM_RXD ^(Note))	8	NC (VCOM_TXD ^(Note))
9	GND	10	Reset

Table 1. SWD 10-Pin Connector Pins

Note: The serial communication function is only available for the e-Link32 Pro, Pin7 and Pin8 are NC pins for the e-Link32.

2 MDK_ARM (KEIL) Setup and Use

e-Link32/e-Link32 Pro for Keil Installation

The following steps show how to install the e-Link32/e-Link32 Pro for Keil:

- Double-click “HT32_Setup_Keil_vxx.exe” to open the Keil Boot program and press the “Yes” button to continue.

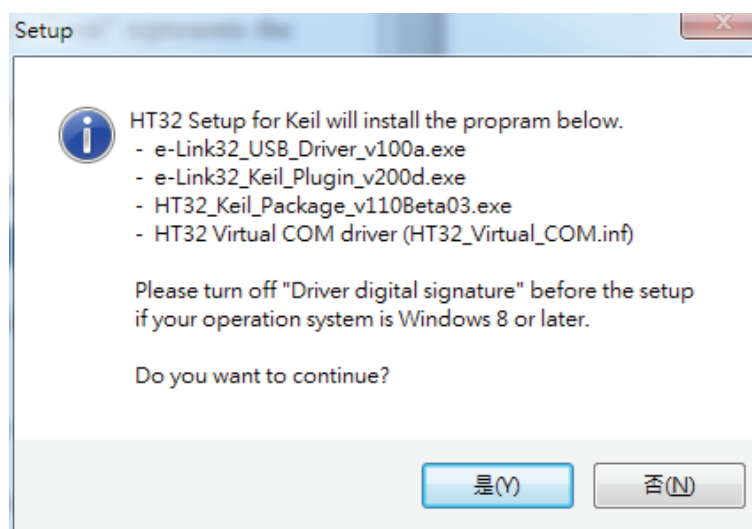


Figure 3. HT32_Setup_Keil_vxx.exe Installation Introduction

- The default installation path of the Keil Boot program is “C:\Program Files (x86)\HT32_Setup_Keil”. Select the desired installation path and press the “Next” button to continue.

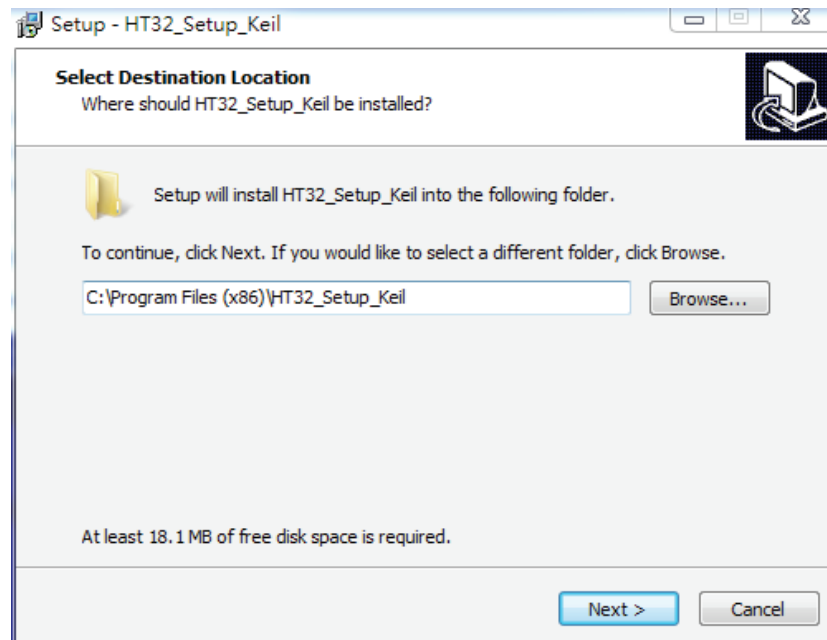


Figure 4. HT32_Setup_Keil_vxx.exe Installation Path

- Press the “Install” button to start the installation.

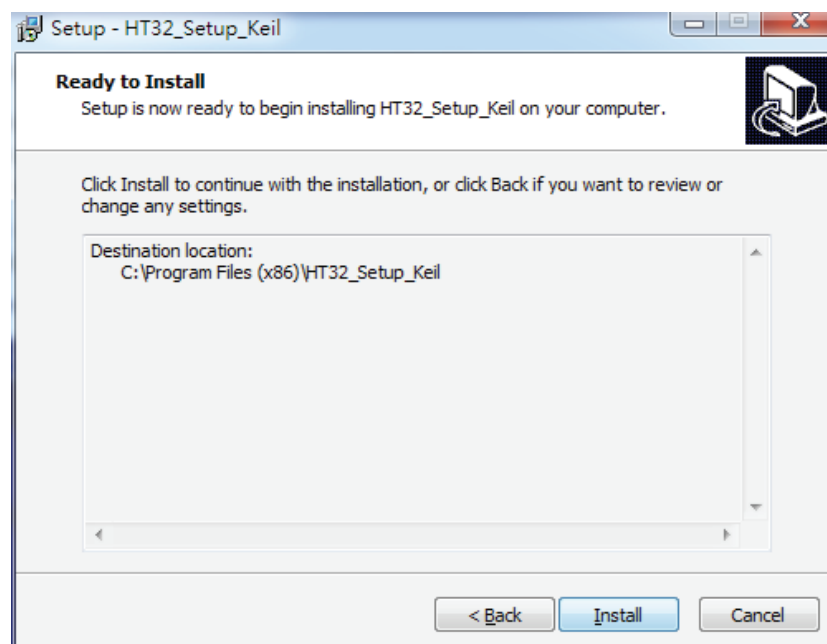


Figure 5. HT32_Setup_Keil_vxx.exe Installation Process

- Once the installation has finished, the following screen will appear. Press the “Next” button to install the “Holtek e-Link32 USB Driver”.

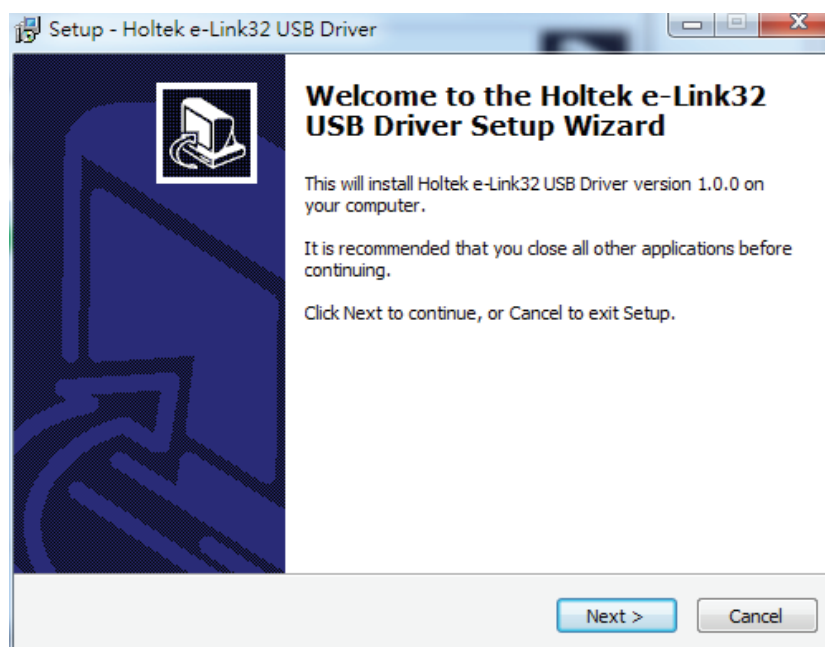


Figure 6. Holtek e-Link32 USB Driver Installation Introduction

- The default installation path of the Holtek e-Link32 USB Driver is “C:\Program Files (x86)\Holtek HT32 Series\e-Link32 USB Driver”. Select the desired installation path and press the “Next” button to install.

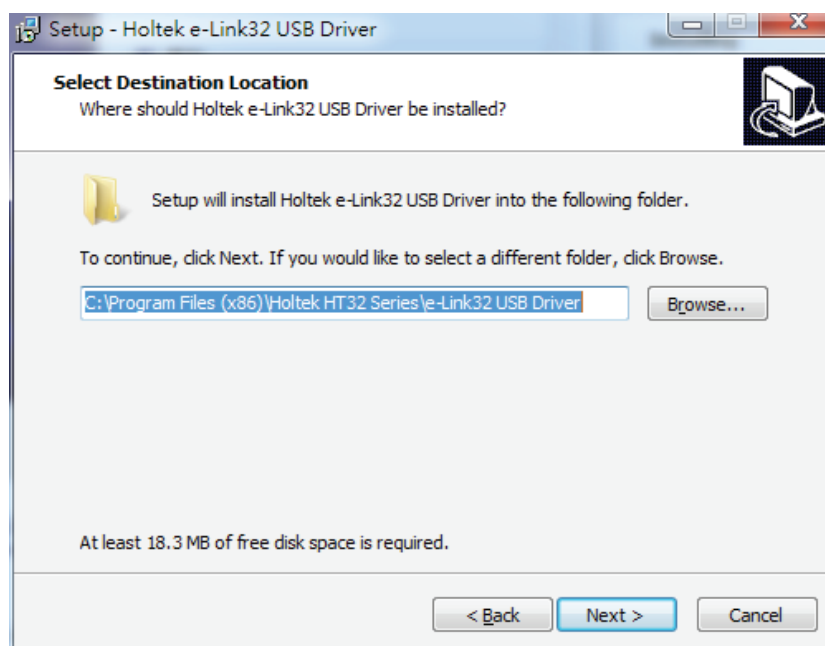


Figure 7. Holtek e-Link32 USB Driver Installation Path

- Once the installation has finished, the following screen will appear. Press the “Finish” button to enter the next Keil Plugin installation process.

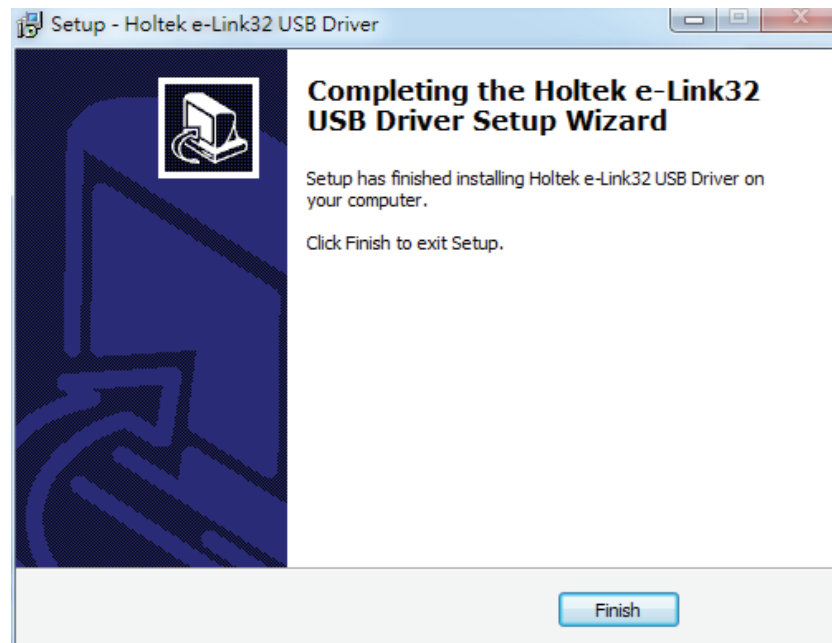


Figure 8. Holtek e-Link32 USB Driver Installation Completion

- If the Holtek e-Link32 Keil Plugin has already been installed, users will be prompted to uninstall any older versions. Press the “Yes” button to continue.

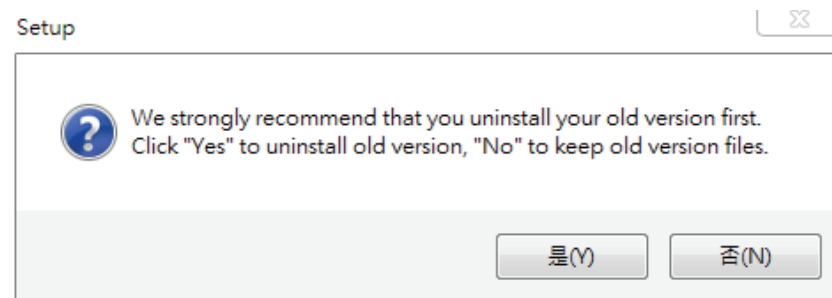


Figure 9. Holtek e-Link32 Keil Plugin Old Version Uninstallation

- Once the uninstallation has finished in the previous step, a Holtek e-Link32 Keil Plugin installation window will appear. Press the “Next” button to continue.

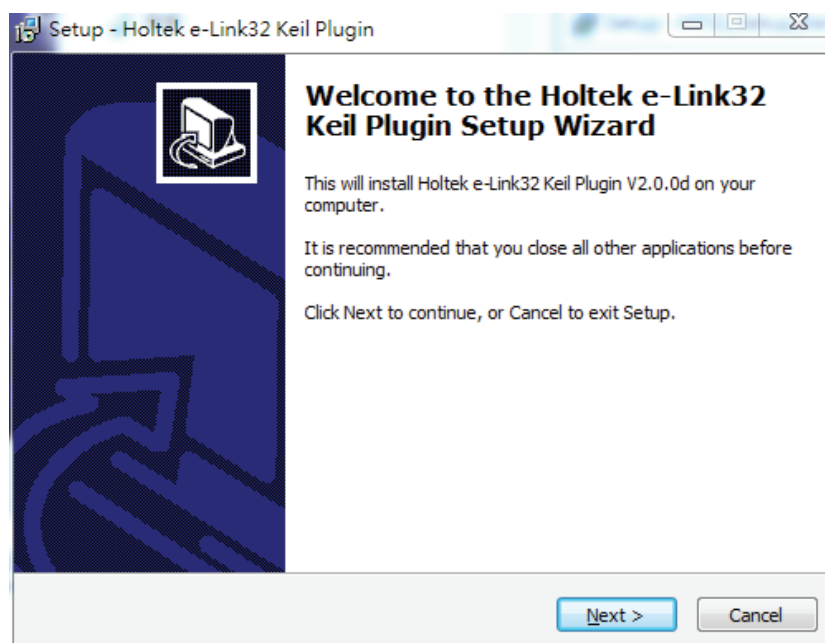


Figure 10. Holtek e-Link32 Keil Plugin Installation Introduction

- The Keil Plugin installation path is subject according to that of Keil4/Keil5. The default installation path of the Keil4/Keil5 is “C:\Keil_xx”. Select the desired installation path and press the “Next” button to install.

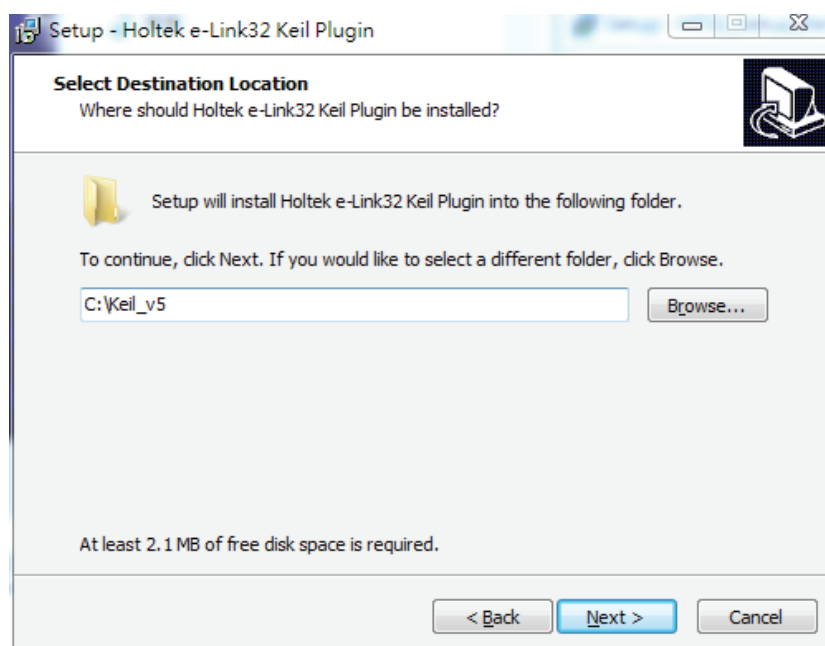


Figure 11. Holtek e-Link32 Keil Plugin Installation Path

- Once the installation has finished, press the “Finish” button to enter the next Holtek HT32 Keil Support Package installation process, then press the “Next” button to continue.

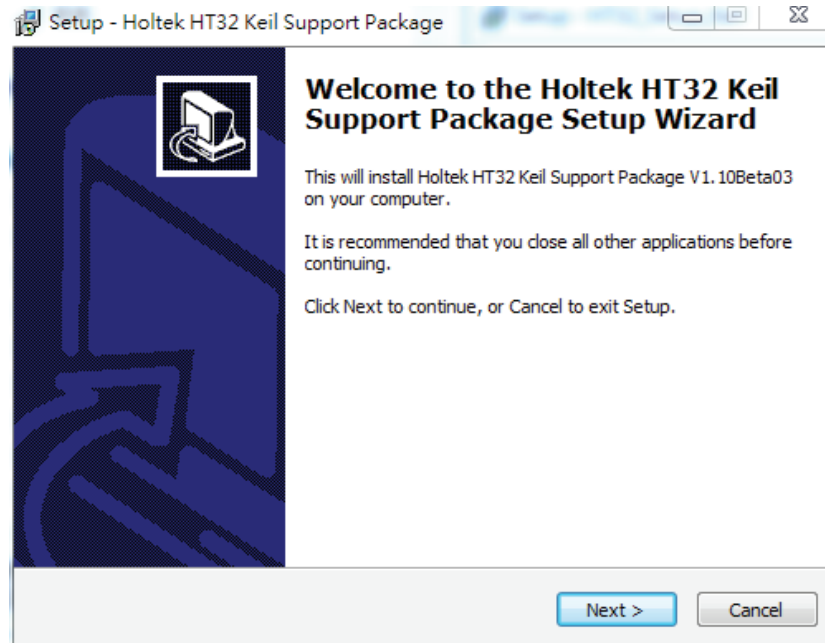


Figure 12. Holtek HT32 Keil Support Package Installation Introduction

- The Keil Support Package installation path is subject to that of the Keil4/Keil5. The default installation path of the Keil4/Keil5 is “C:\Keil_xx”. Select the desired installation path and press the “Next” button to install.

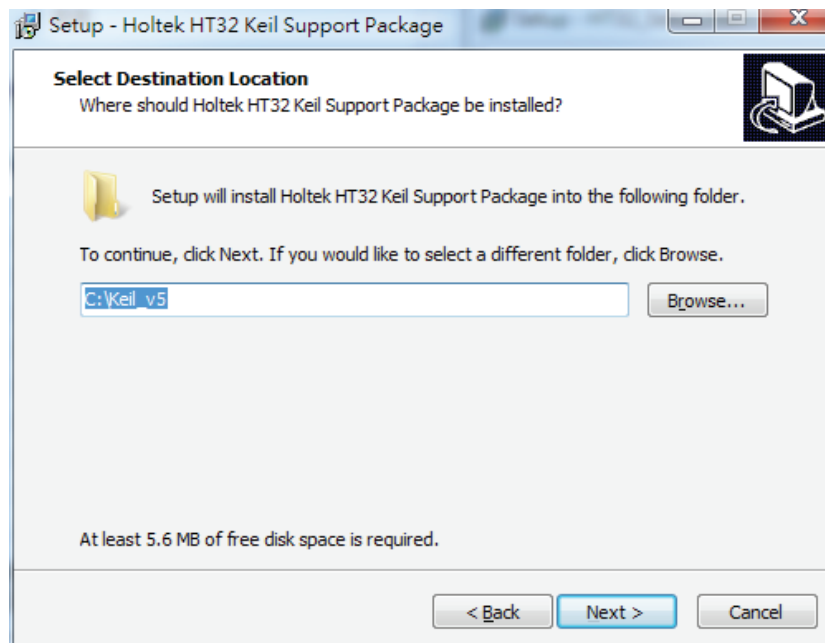


Figure 13. Holtek HT32 Keil Support Package Installation Path

- Once the installation has finished, press the “Finish” button to enter. The completed window will be displayed after which the “Finish” button should be selected to restart the computer.

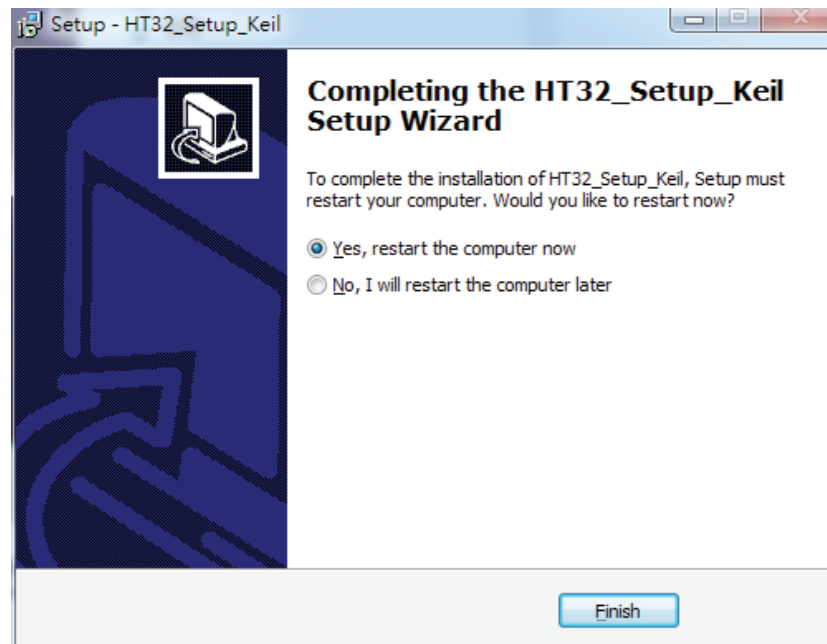


Figure 14. Keil Installation Completion

- Connect the e-Link32/e-Link32 Pro to the PC's USB port.
- Open the PC's “Device Manager” to check the connection status of the e-Link32/e-Link32 Pro.
- If the e-Link32 is connected, a connection device named “Holtek e-Link32 Debug Interface” will appear on the “Device Manager” window. This will confirm that the installation has been successful.

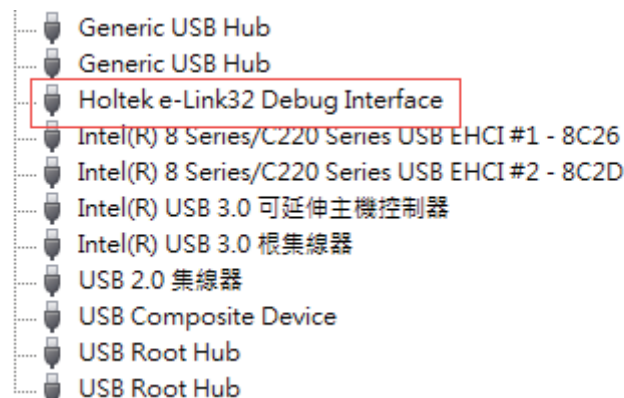


Figure 15. e-Link32 Device Name

- If the e-Link32 Pro is connected, a connection device named “HID-compliant device” will appear on the “Device Manager” window, and the corresponding Virtual COM Port will also be found, confirming that the installation was successful.



Figure 16. e-Link32 Pro Device Name

e-Link32/e-Link32 Pro with Keil4 Setup and Use

- Open the Keil uVision4 project, click “Options for Target”, then click the “Debug” option to select “Holtek e-Link32 Debugger” for e-Link32 or select “CMSIS-DAP Debugger” for e-Link32 Pro.

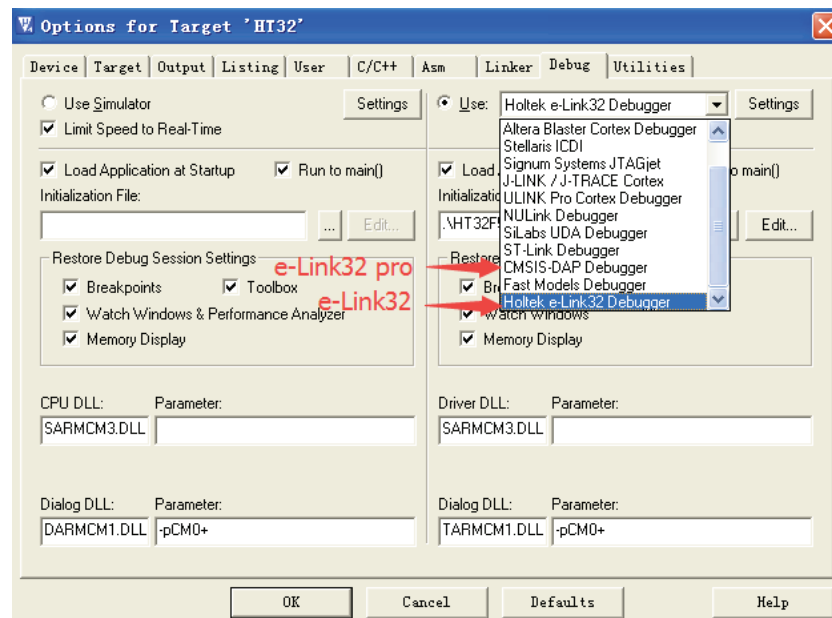


Figure 17. Keil4 Debugger Selection

- After the debugger is selected, click the “Settings” button on the right side to open the corresponding setting window. Confirm that the setting is successful when the device ID is read. The e-Link32 setting window is shown below:

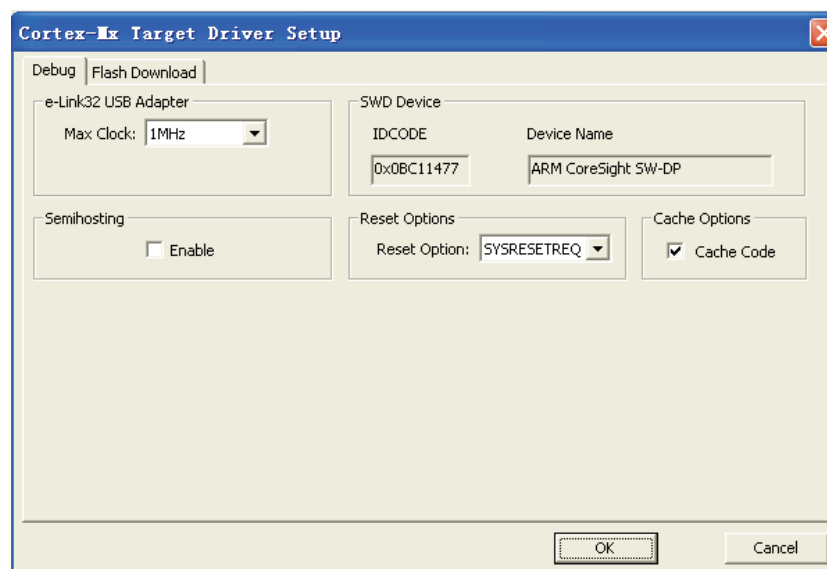


Figure 18. Keil4 e-Link32 Setting Window

The e-Link32 Pro setting window is shown below:
Select SW mode as the Port type.

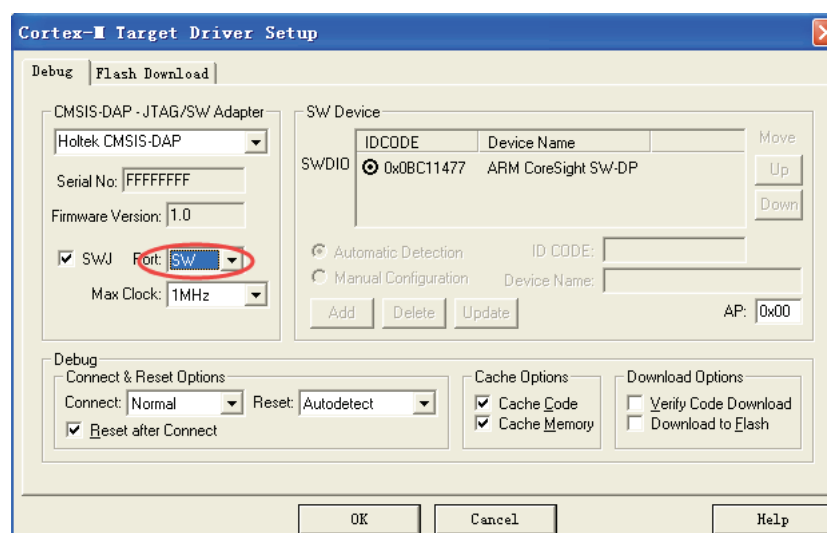


Figure 19. Keil4 e-Link32 Pro Setting Window

- Click “Flash Download” to check the “Programming Algorithm”, if there is no content or the content is not correct, then press the “Add” button.

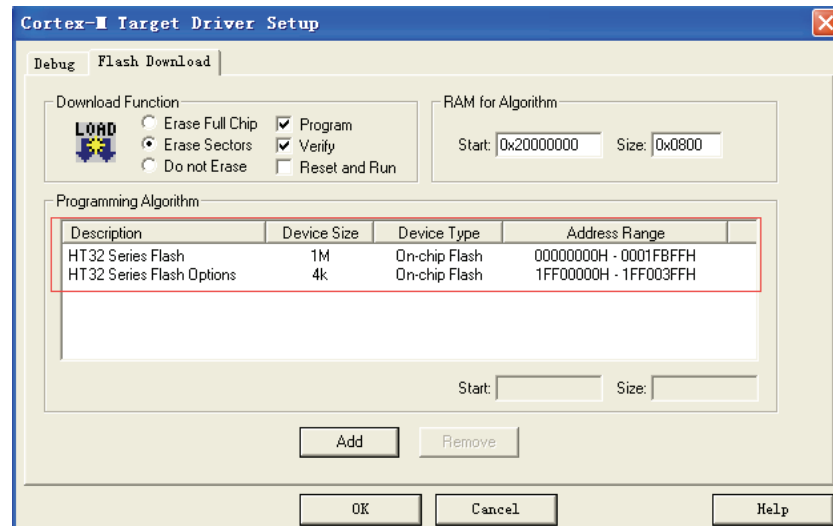


Figure 20. Keil4 - Flash Download Setup

e-Link32 Pro with Keil5 Setup and Use (No Support e-Link32)

- Open the Keil uVision5 project, click “Options for Target”, and select “CMSIS-DAP Debugger” in the “Debug” option.

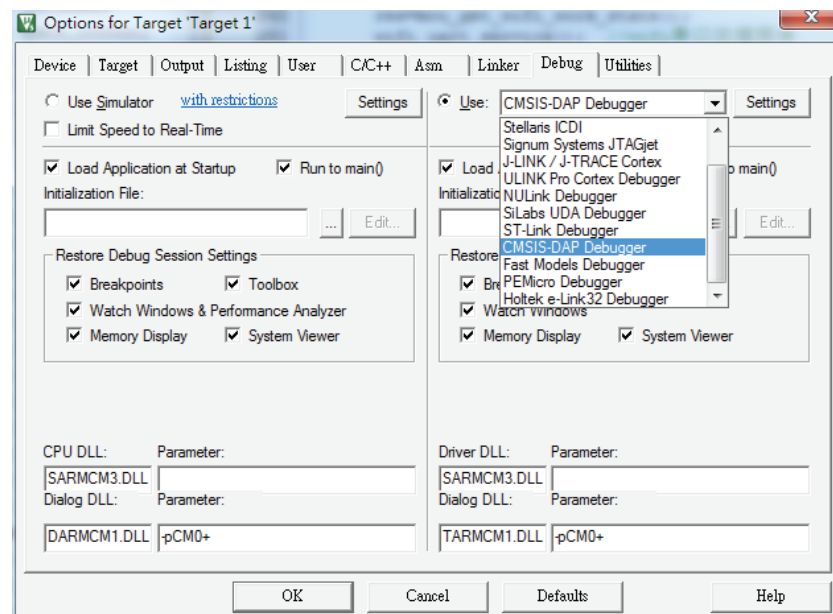


Figure 21. Keil5 Debugger Selection

- After the debugger is selected, click the “Settings” button on the right side to select the SW options. Confirm that the setting is successful when the device ID is read.

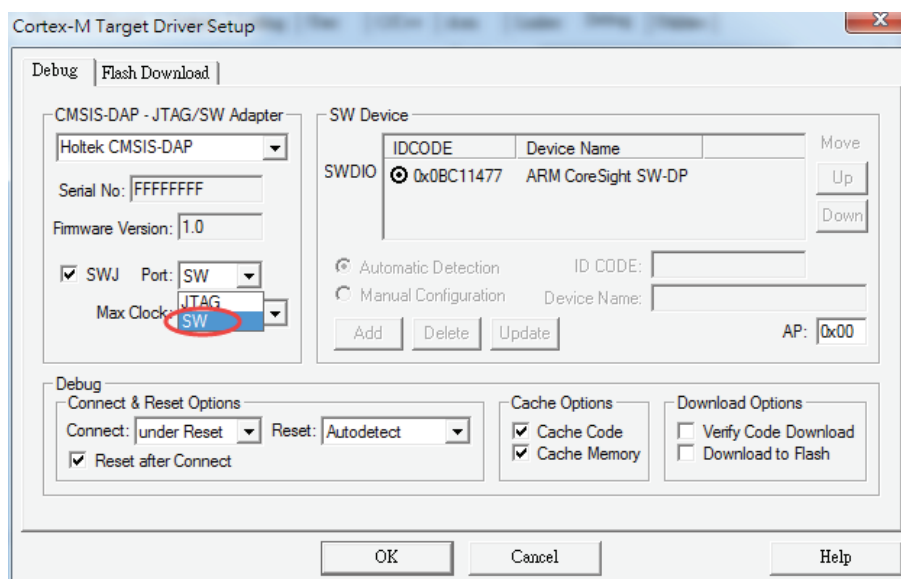


Figure 22. Keil5 Debugger Setup

- Click “Flash Download” to check “Programming Algorithm”, if there is no content or the content is not correct, then press the “Add” button.

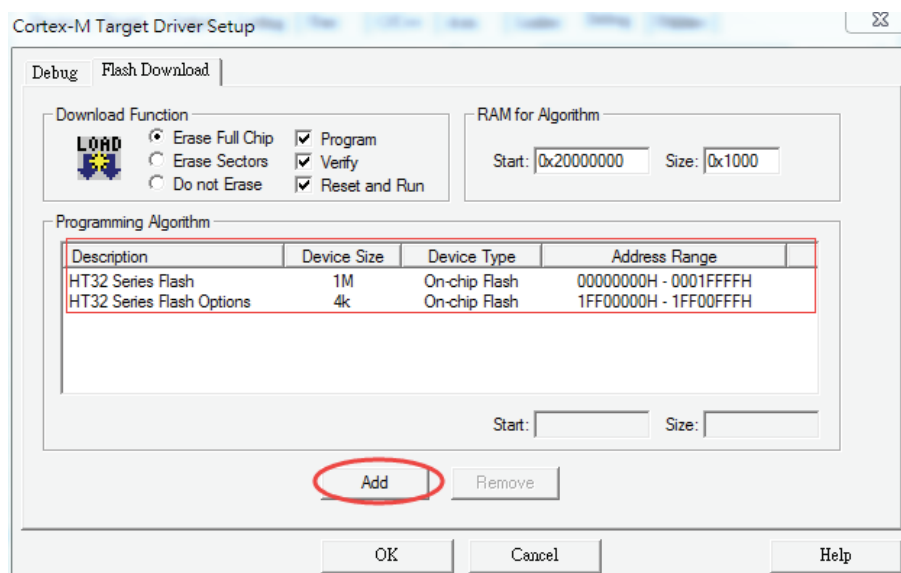


Figure 23. Keil5 – Flash Download Setup

3 IAR Setup and Use

e-Link32/e-Link32 Pro for IAR Installation

The following steps show how to install the e-Link32/e-Link32 Pro for IAR:

- Double-click “HT32_Setup_IAR_vxx.exe” to open the IAR Boot program and press the “Yes” button to continue.

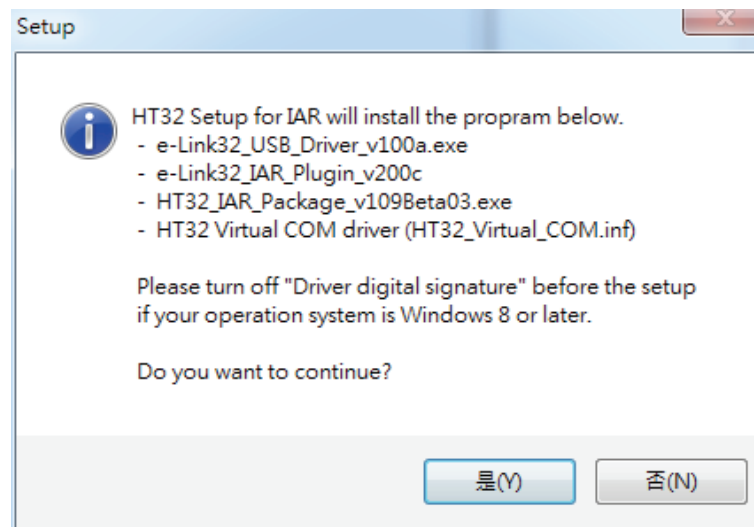


Figure 24. HT32_Setup_IAR_vxx.exe Installation Introduction

- The default installation path of the IAR Boot program is “C:\Program Files (x86)\HT32_Setup_IAR”. Select the desired installation path and press the “Next” button to continue.

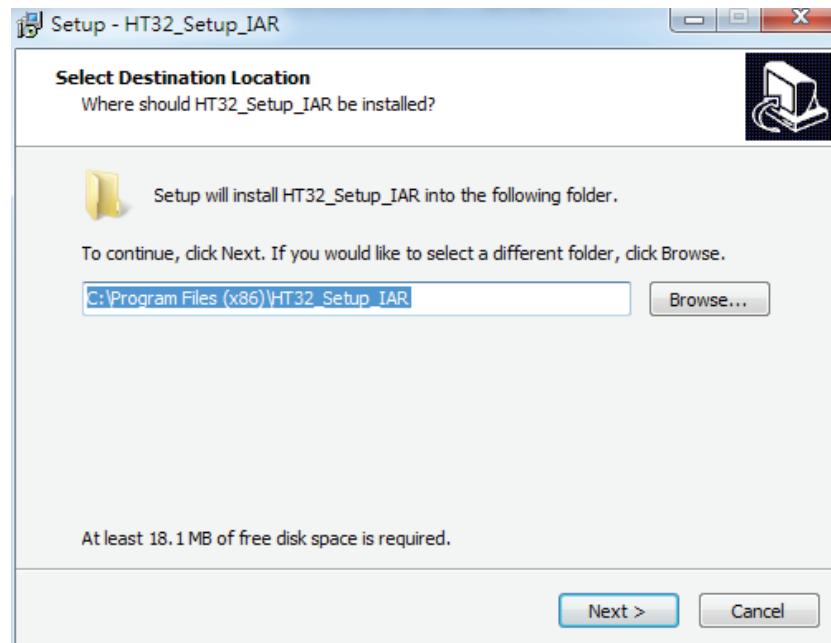


Figure 25. HT32_Setup_IAR_vxx.exe Installation Path

- Press the “Install” button to start the installation.

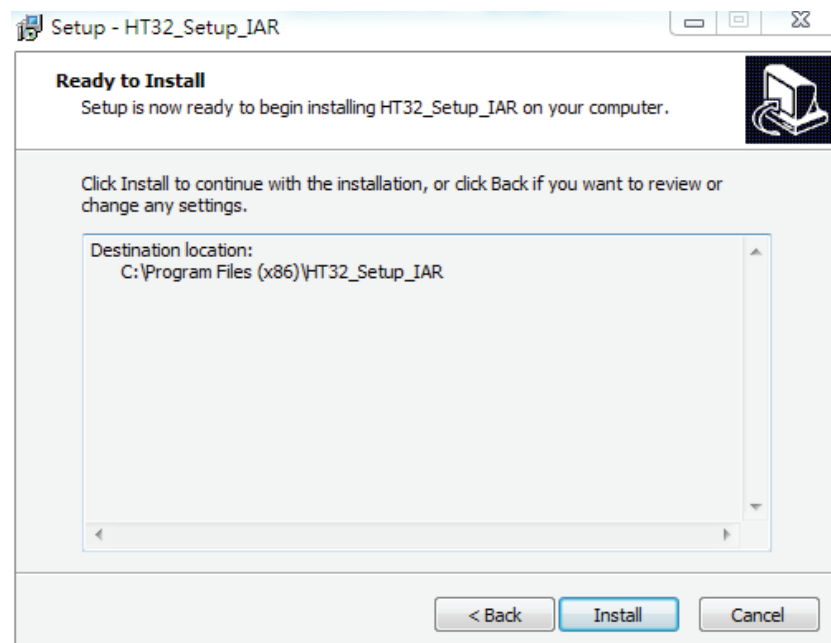


Figure 26. HT32_Setup_IAR_vxx.exe Installation Process

- Once the installation has finished, the following screen will appear. Press the “Next” button to install the “Holtek e-Link32 USB Driver”.

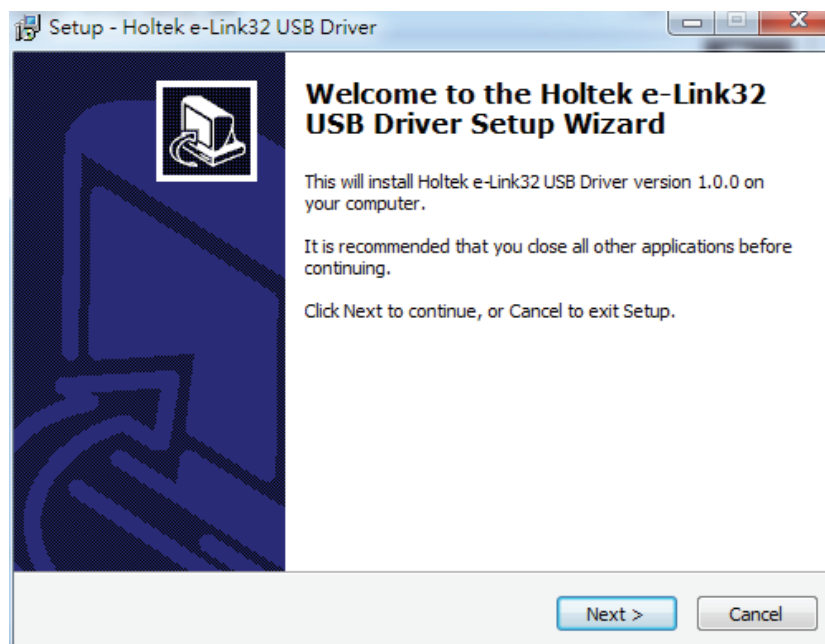


Figure 27. Holtek e-Link32 USB Driver Installation Introduction

- The default installation path of the Holtek e-Link32 USB Driver is “C:\Program Files (x86)\Holtek HT32 Series\e-Link32 USB Driver”. Select the desired installation path and press the “Next” button to install.

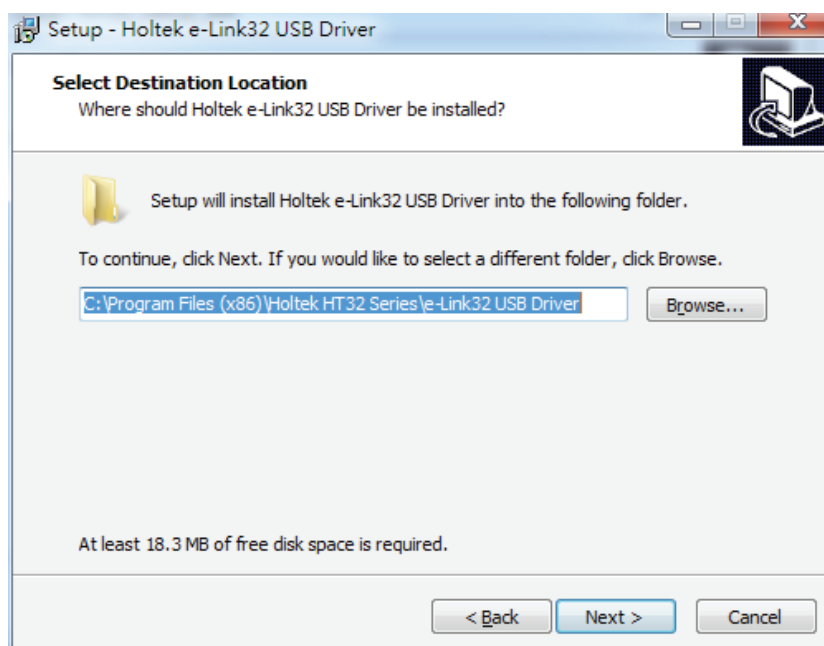


Figure 28. Holtek e-Link32 USB Drive Installation Path

- Once the installation has finished, the following screen will appear. Press the “Finish” button to enter the next IAR Plugin installation process.

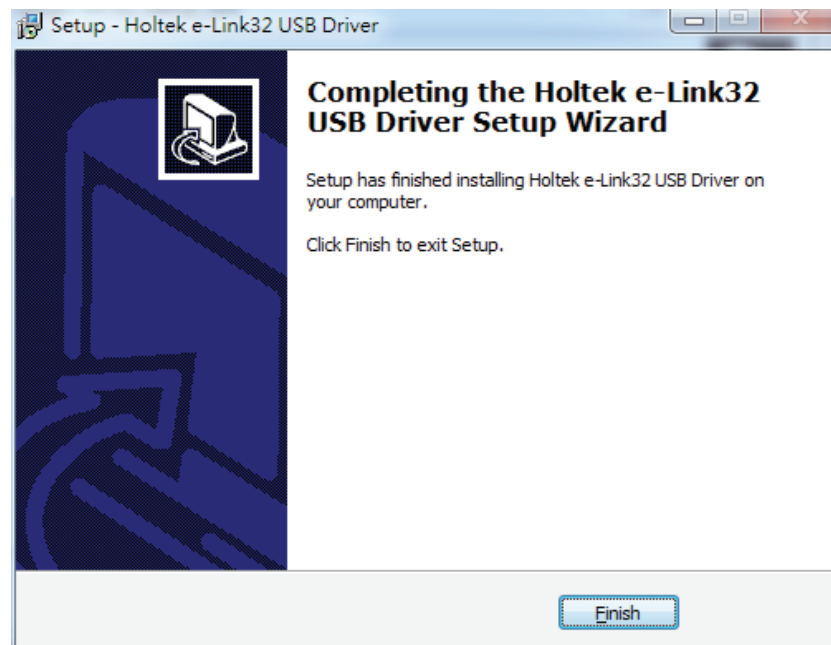


Figure 29. Holtek e-Link32 USB Driver Installation Completion

- If the Holtek e-Link32 IAR Plugin has already been installed, users are prompted to uninstall any older versions. Press the “Yes” button to continue.

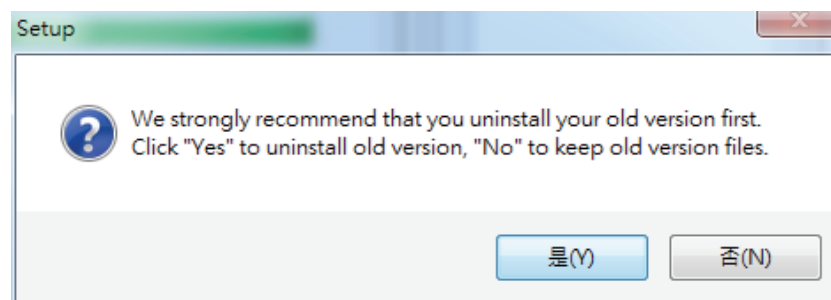


Figure 30. Holtek e-Link32 IAR Plugin Old Version Uninstallation

- Once the uninstallation has finished in the previous step, a Holtek e-Link32 IAR Plugin installation window will appear. Press the “Next” button to continue.

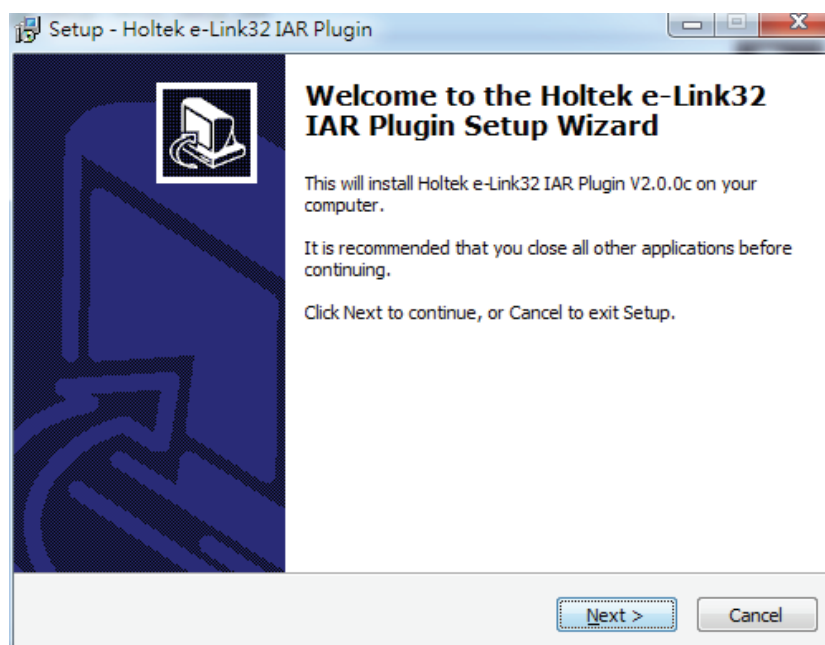


Figure 31. Holtek e-Link32 IAR Plugin Installation Introduction

- The default installation path of the IAR Plugin is “C:\Program Files\Holtek HT32 Series\e-Link32 IAR Plugin”. Select the desired installation path and press the “Next” button to install.

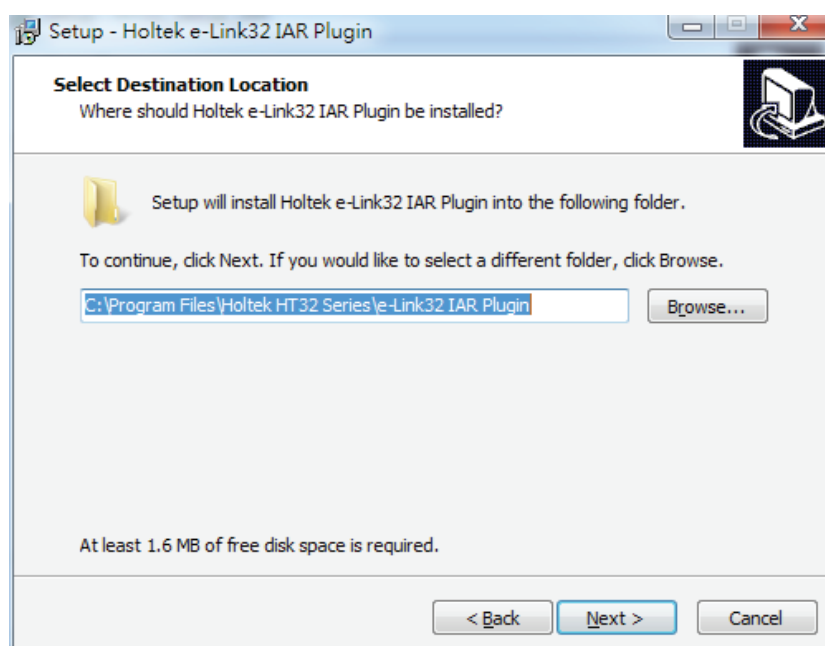


Figure 32. Holtek e-Link32 IAR Plugin Installation Path

- Once the installation has finished, press the “Finish” button to enter the next Holtek HT32 IAR Support Package installation process, then press the “Next” button to continue.

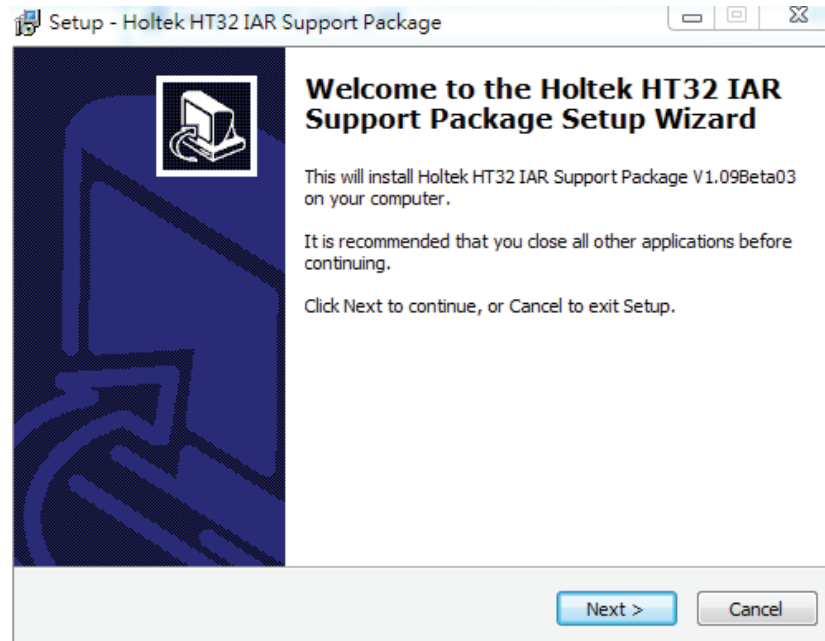


Figure 33. Holtek HT32 IAR Support Package Installation Introduction

- Once the installation has finished, press the “Finish” button.
- Connect the e-Link32/e-Link32 Pro to the PC's USB port.
- Open the PC's “Device Manager” to check the connection status of the e-Link32/e-Link32 Pro.
- If the e-Link32 is connected, a connection device named “Holtek e-Link32 Debug Interface” will appear on the “Device Manager” window, confirming that the installation has been successful.

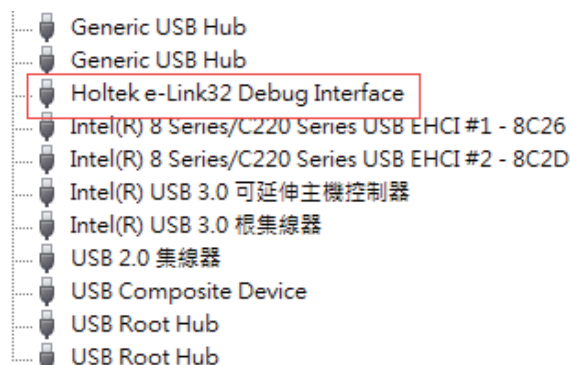


Figure 34. e-Link32 Device Name

- If the e-Link32 Pro is connected, a connection device named “HID-compliant device” will appear on the “Device Manager” window, and the corresponding Virtual COM Port will also be found, confirming that the installation has been successful.



Figure 35. e-Link32 Pro Device Name

e-Link32/e-Link32 Pro with IAR EWARM Setup and Use

- Open the IAR EWARM project, and then open “Options”.

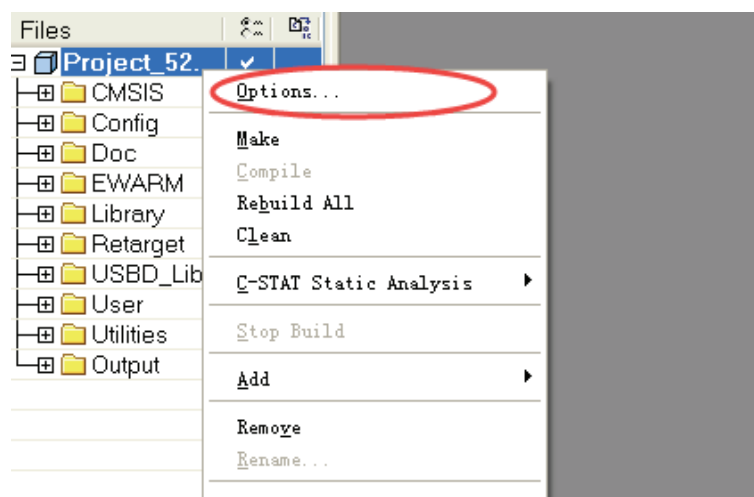


Figure 36. IAR Options

- Click “Debugger” to select “RDI” for e-Link32 or select “CMSIS DAP” for e-Link32 Pro.

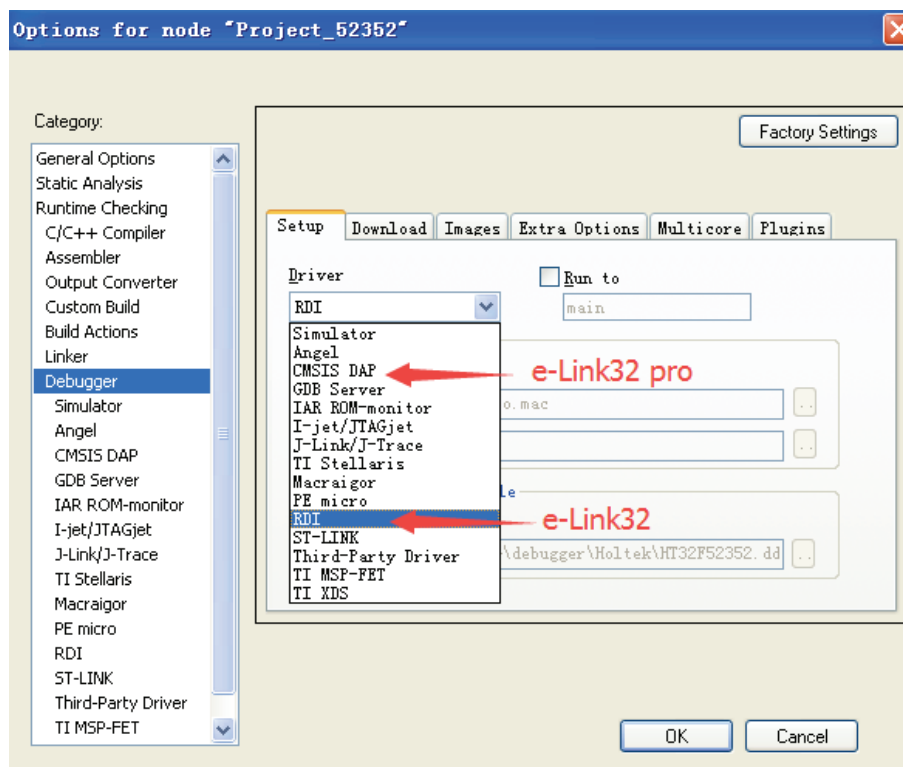


Figure 37. IAR Debugger Selection

- Setting the selected debugger.

Check whether “e-Link32_rdi.dll” is selected in “Manufacturer RDI driver” for e-Link32 RDI.

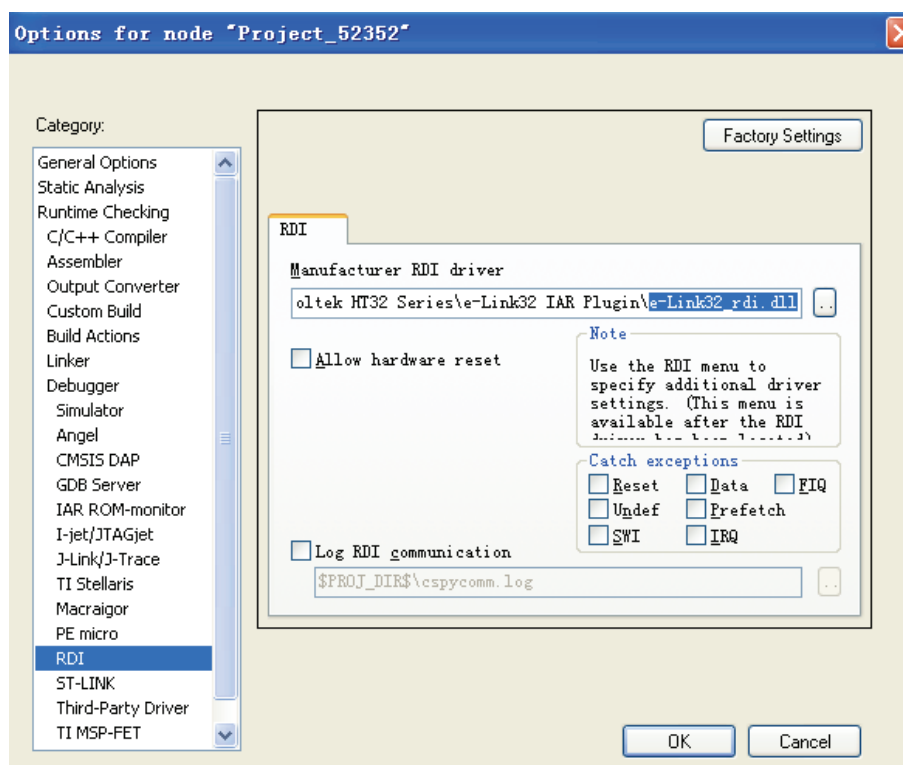


Figure 38. IAR e-Link32 Debugger Setup

Switch Interface option to SWD mode for e-Link32 Pro CMSIS DAP.

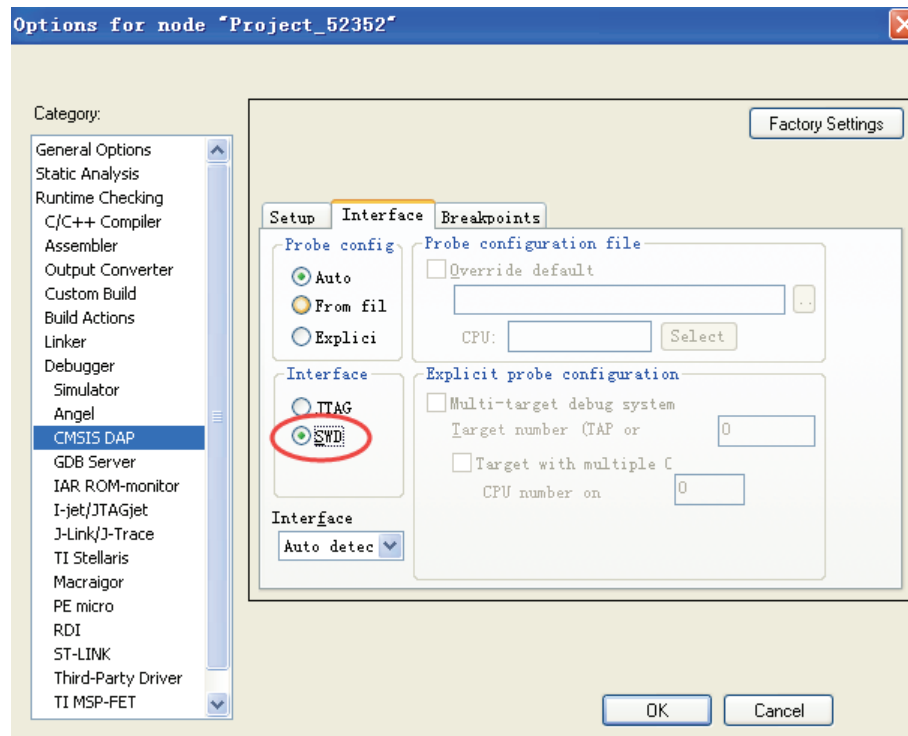


Figure 39. IAR e-Link32 Pro Debugger Setup

- Once the settings have finished, the corresponding debugger options will appear on the function table.

 


Figure 40. IAR e-Link32 Debugger Function Table



Figure 41. IAR e-Link32 Pro Debugger Function Table

Copyright© 2017 by HOLTEK SEMICONDUCTOR INC.

The information appearing in this Data Sheet is believed to be accurate at the time of publication. However, Holtek assumes no responsibility arising from the use of the specifications described. The applications mentioned herein are used solely for the purpose of illustration and Holtek makes no warranty or representation that such applications will be suitable without further modification, nor recommends the use of its products for application that may present a risk to human life due to malfunction or otherwise. Holtek's products are not authorized for use as critical components in life support devices or systems. Holtek reserves the right to alter its products without prior notification. For the most up-to-date information, please visit our web site at <http://www.holtek.com/en/>.